


E³ CHIMNEY SEAL INSTALLATION PROCEDURES




- 1** Clean and dry the flange of the casting frame and the top 4-inches of the cone section, with a wire brush and a whisk broom or rag.



- 2** Pull the **E3 EPDM** rubber sleeve over the casting and down to top of cone section, leaving a minimum 2-inch overlap on the casting flange.
Fold back top of sleeve to expose 2-inches of adjustment ring.

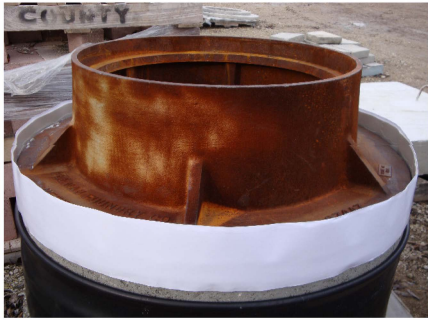

- 3** Unroll 4-inch Butyl Mastic tape. Place 2" of mastic on top adjustment ring, Leaving protective tape on.
Roll sleeve up onto butyl tape, Remove protective tape and press butyl and sleeve onto casting flange.

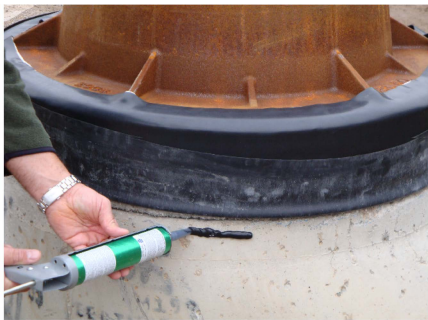

- 4** Fold up bottom of sleeve to expose top of cone section. Apply a bead of butyl caulk to vertical lip of cone.
Roll sleeve down, over butyl caulk.



- 5** Install Stainless Steel band at bottom of sleeve with 5/16" nut driver.

Installation complete

ADAPTOR